

hinen

SmartBox



Suitable for portable power station



Quick Installation Manual

Disclaimer

SmartBox needs to be transported, used and operated under suitable environmental and electrical conditions. In the following cases, the manufacturer has the right not to provide after-sales service or assistance:

Before installing the device, please read the user manual carefully to understand product information and safety precautions.

All installation operations of the equipment must be carried out by well-trained professional electrical technicians. Operators must wear personal protective equipment. Operations that violate any international policies and regulations or local policies and regulations are not covered by the equipment warranty.

Before installing the equipment, please check whether the delivery is complete and complete, and whether there is any obvious external damage according to the "Packing List". If anything is missing or damaged, please contact your dealer.

Equipment damage caused by failure to follow the documentation is not covered by the equipment warranty.

The cable colors mentioned in this document are for reference only, and the selection of cables should comply with local cable standards.

Note: Due to product version upgrades or other reasons, the content of this document will be updated from time to time. Unless otherwise agreed, this document is only used as a guide, and all statements, information and suggestions in the document do not constitute any express or implied guarantee.

Safety and Warnings

SmartBox strictly abides by relevant safety regulations for product design and testing. During installation, operation or maintenance, please carefully read and follow all instructions and precautions in the user manual, any improper operation may cause personal or property damage.

Any installation and operation must be done by a qualified electrician in accordance with local grid or company standards, wiring rules or requirements.

This product has been tested for insulation before leaving the factory, and the wrong dielectric test will destroy the control system. It is strictly forbidden to carry ATS for dielectric test.

Symbol Definition and Explanation



Warning!

Failure to follow the warning signs in this manual could result in personal injury.



High voltage and electric shock hazard!



Hot surface!



Product components are recyclable.



This side up! Arrows must always point upwards during transport, handling and storage.



Disposal as domestic rubbish is prohibited.



See operating instructions.



Stay dry! Please store product in a dry and protected place, avoid excessive moisture.



After the inverter is powered off, there is a delay in the discharge of internal components. Please wait for 5 minutes until the device is fully discharged.

Contents

1. Introduction

1.1 Product introduction	1
1.2 Technical data	2

2. Equipment installation

2.1 Packing list	3
2.2 System Components	4
2.3 Device installation	6
2.3.1 Installation requirements	6
2.3.2 Install the Smart Box	7
2.4 Electrical connections	8
2.4.1 Preparation before installation	8
2.4.2 Installing the protective ground cable	8
2.4.3 Installation power line	9

3. Instructions for use

11


1. Introduction

1.1 Product introduction

Function

In home off-grid power supply system, the system switches the power supply status of important local loads through off-grid control box, when the power grid is down, outdoor power supply works in inverter mode, local loads are switched to outdoor power supply by off-grid control box, when the power grid is restored, local loads are switched to grid power.

Product appearance

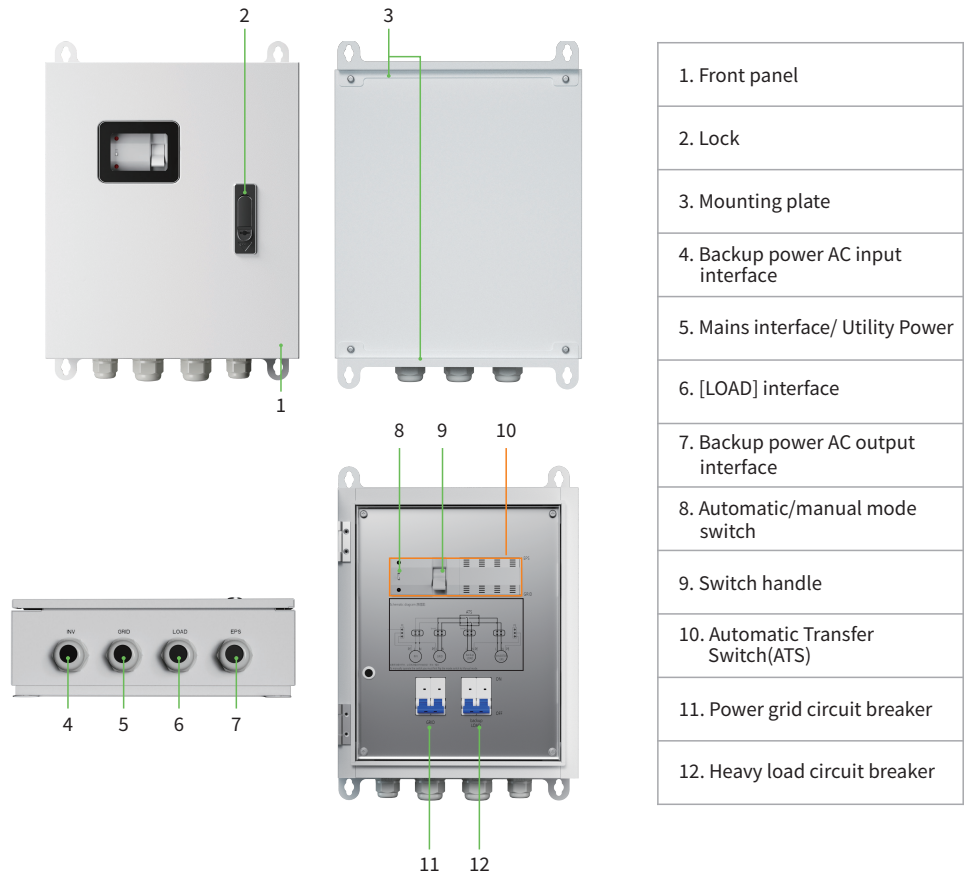




1.2 Technical data

INV (Backup power AC input interface)	
Rated AC Power	2300W
Rated Continuous Output Current	10A
AC Output Voltage(Nominal)	230V
AC Output Voltage Range	197-253V
AC Frequency(Nominal)	50Hz/60Hz
GRID (Mains interface/ Utility Power)	
Rated AC Power	5300W
Max. AC Input Overcurrent Protection	40A
Continuous Input Current	25A
AC Input Voltage(Nominal)	230V
AC Input Voltage Range	197-253V
AC Frequency(Nominal)	50Hz/60Hz
Load ([LOAD] interface)	
Rated AC Power	3000W
Max. AC Output Overcurrent Protection	40A
Rated Continuous Output Current	13A
AC Output Voltage(Nominal)	230V
AC Output Voltage Range	197-253V
AC Frequency(Nominal)	50Hz/60Hz

EPS (Backup power AC output interface)	
Rated AC Power	3000W
Rated Continuous Input Current	13A
AC Input Voltage(Nominal)	230V
AC Input Voltage Range	220-240V
AC Frequency(Nominal)	50Hz/60Hz
Additional Features	
Operating Temperature Range	-25~60°C
Protection Rating	IP20
Operating Humidity(RH)	Up to 90%
Maximum Elevation	2000m
Mounting options	Wall mounted
Weight	6kg
Dimensions(H/W/D)	300/350/93mm
Manual Control Bypass Switch	Yes
Grid Disconnection Switch Time	<100ms
Grid recovery Switch Time	<100ms
Surge Class	5kA/10kV


2. Equipment installation

2.1 Packing list

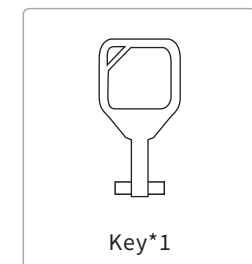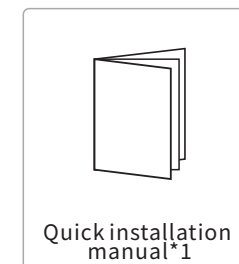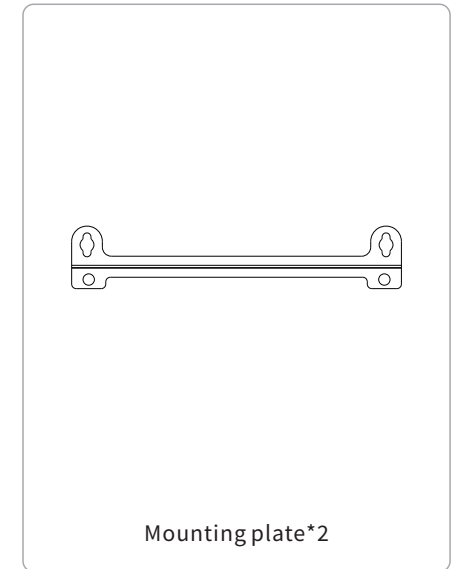


2.2 System Components

Home off-grid systems generally consist of solar panels, outdoor power supplies, off-grid control boxes, AC switches and power distribution units.

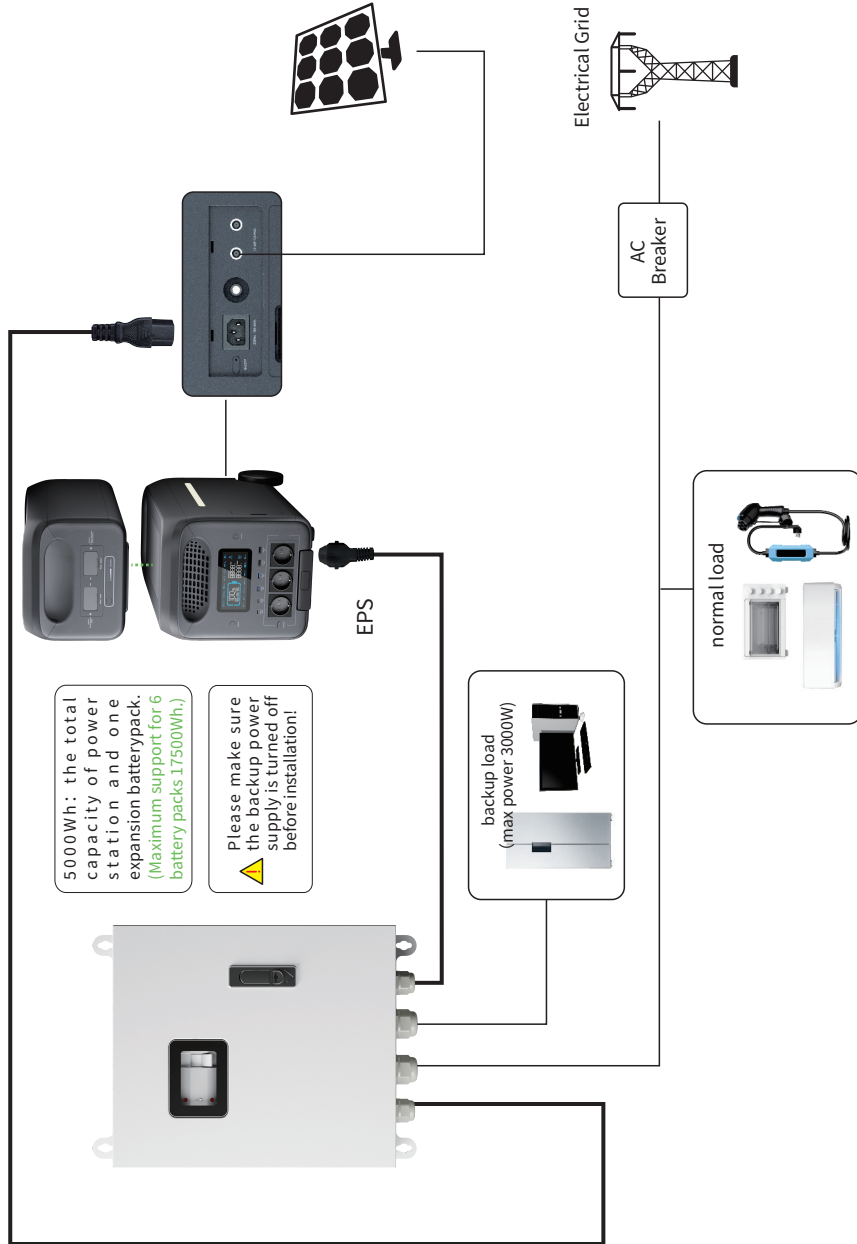

Modify line warning

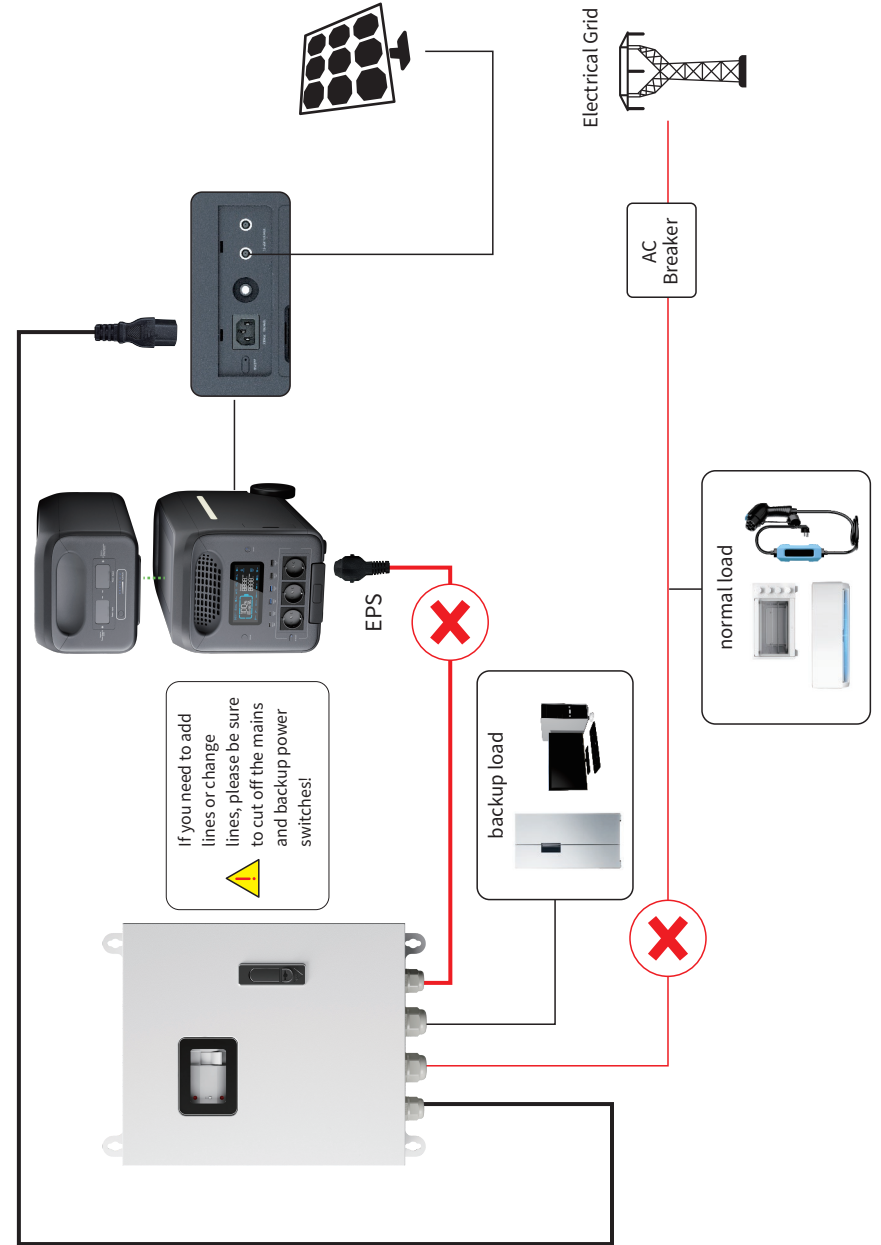


2.3 Device installation

2.3.1 Installation requirements

⚠ Danger

1. When installed outdoors, avoid direct sunlight, choose a sheltered installation site, or set up an awning.
2. Install a lightning arrester on the side where the off-grid control box is connected to the power grid.


Installation space Angle

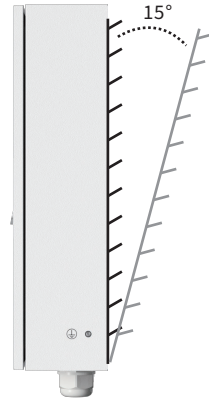

Installation hole positions and dimensions

⚠ Danger

Before drilling, make sure to avoid the embedded water and electricity lines in the wall to avoid danger.

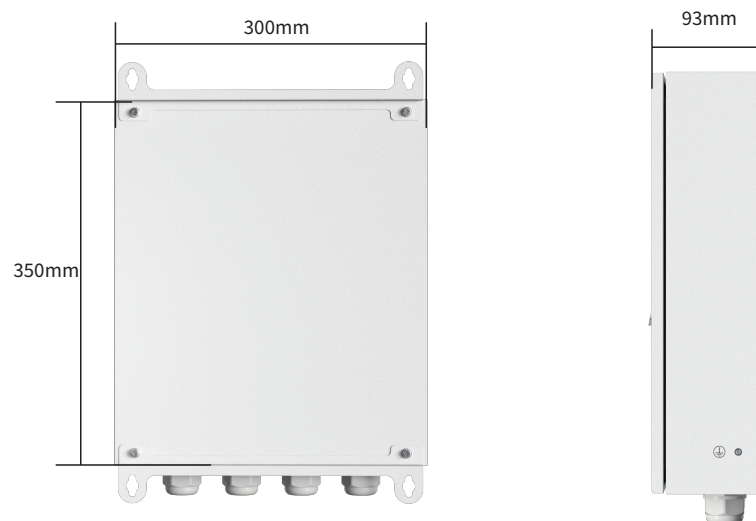


2.3.2 Install the Smart Box


Description:

- The M6 x 60 expansion bolts are delivered with the container. If the length or quantity cannot meet the installation requirements, Please prepare M6 stainless steel expansion bolts for yourself.
- The expansion bolts delivered with the container are mainly used for walls of solid brick and concrete structure. If you choose other types of walls, ensure that the installation bolts meet the bearing requirements of the inverter and select the installation bolts by yourself.
- In residential areas, do not install the inverter on gypsum board walls or similar walls with poor sound insulation, so that the noise generated by the inverter will not disturb the residents in the living area.

- 1 Secure the upper and lower wall hangings to the chassis using cross screws.
- 2 Mark the location of the punch with a pen. (It is recommended to install at a height of 1.4 meters from the ground)
- 3 Use a drill to drill holes according to the anchor points.

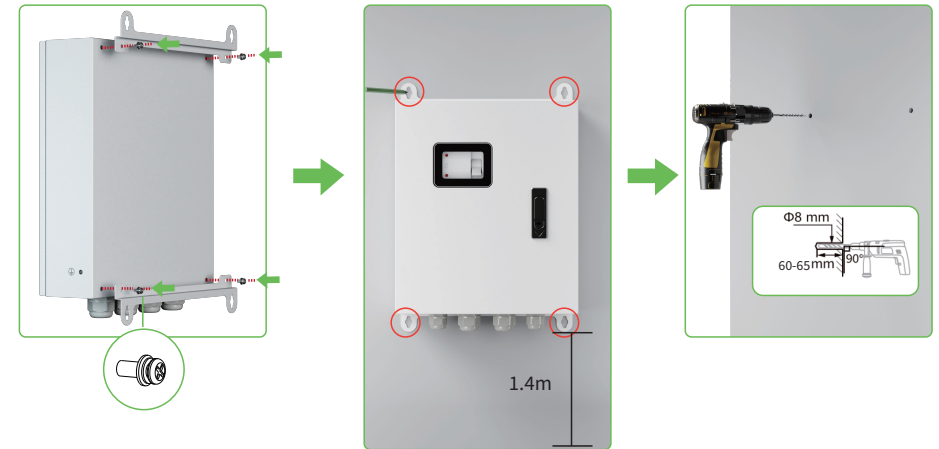

- 4 Insert four expansion tubes into the borehole.
- 5 Lock the top and bottom four wall hanging screws.

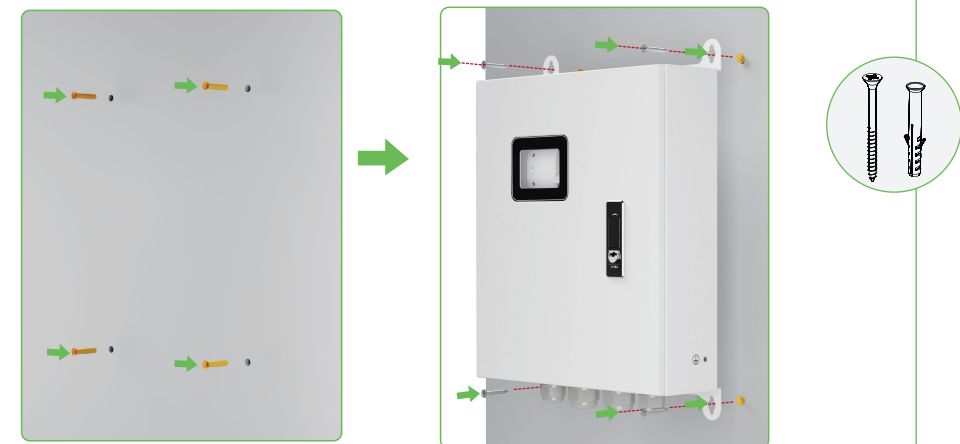

2.4 Electrical connections

2.4.1 Preparation before installation

Notice

- Connections must comply with the installation regulations of the country/region where the equipment is located.
- Before electrical connection, ensure that the circuit breaker of the off-grid control box and all switches connected to the device are in the "OFF" state. Otherwise, high voltage may lead to electric shock.


Users should prepare cables based on actual application scenarios.

Items	Cables	Type	Conductor cross-sectional area range	Outside diameter
1	Protective ground wire	Single-core outdoor copper cable	4mm ² ~10mm ²	—
2	Off-grid load	Outdoor copper core cable	4mm ² ~6mm ²	10mm~21mm
3	Ac power grid output line	Outdoor copper core cable	4mm ² ~6mm ²	10mm~21mm
4	Inverter AC input line	Outdoor copper core cable	4mm ² ~6mm ²	10mm~21mm

2.4.2 Installing the protective ground cable

Danger






Do not connect the N cable to the chassis as a protective ground cable. Otherwise, electric shocks may occur.


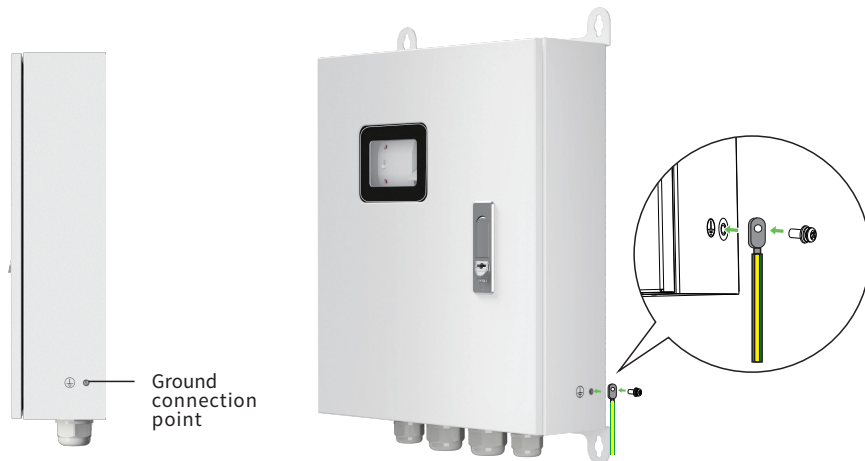


2.4.3 Installation power line

Description

Before installing cables, open the panel of the Smart Box and connect cables through the cable port. After all cables are installed, reinstall the panel.

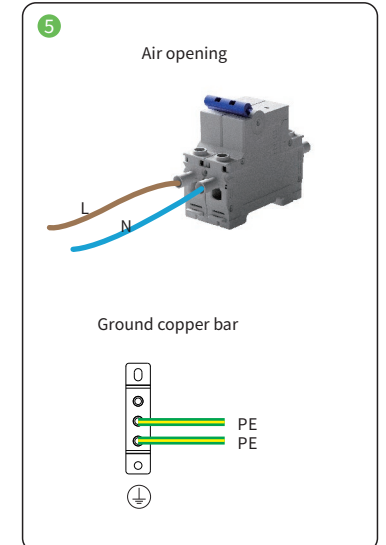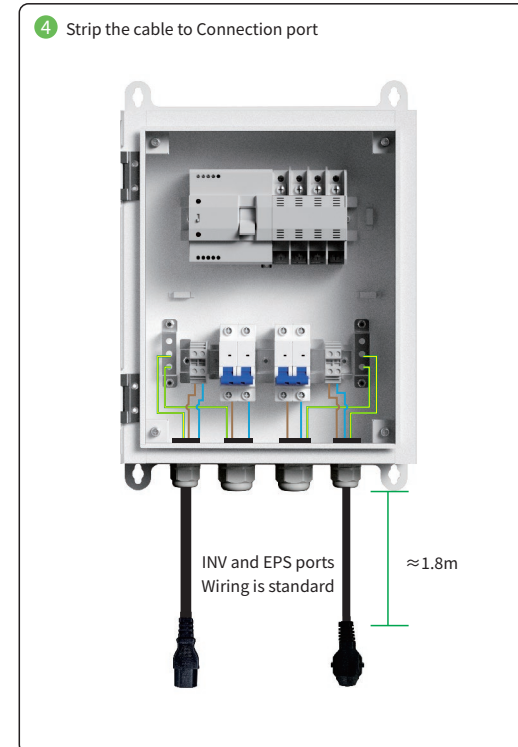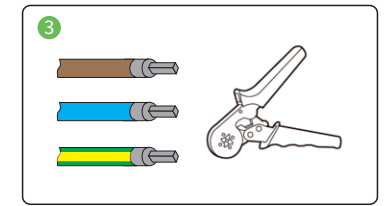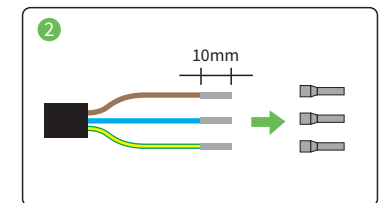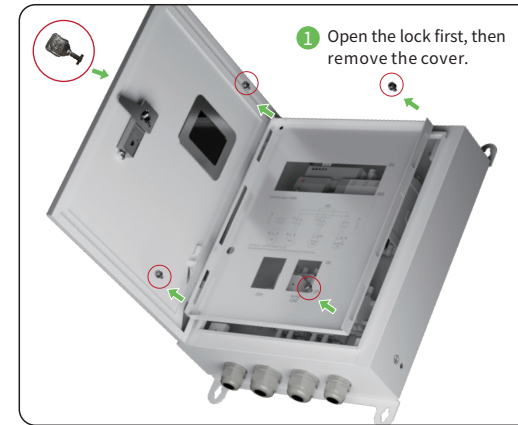


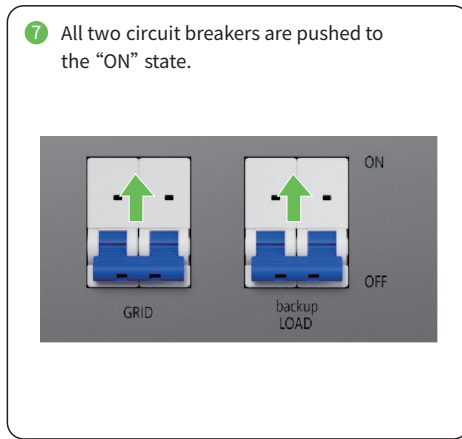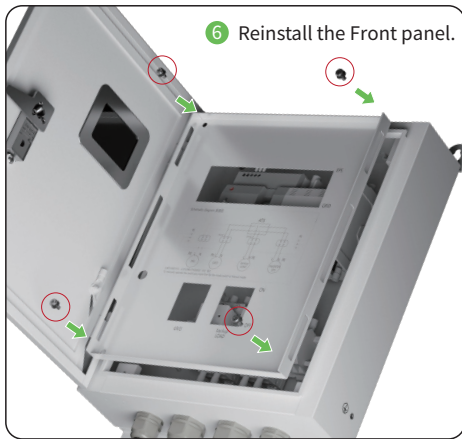


Note: When the Smart Box is not locked with a key, slide the lock switch down and the cover can be opened only after the lock switch pops up.

Description

• Automatic mode: Power Grid will automatically convert to Grid, power failure will automatically convert to EPS.

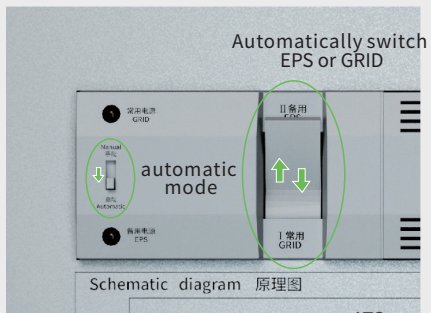

• Manual mode: You can manually switch power from the grid or EPS.

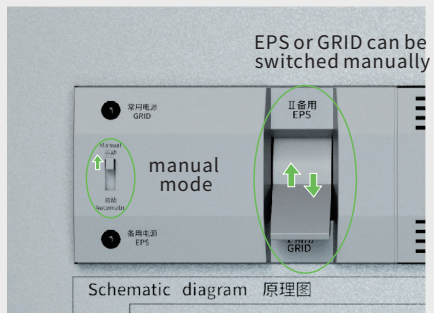


(Automatic mode is recommended)

3. Instructions for use

1. Before operation, please check whether the voltage input meets the requirements. The control voltage is AC230V, and the voltage range required for normal operation of the switch is AC187V~AC253V.
2. Please test whether the ATS can work normally in the manual state, and then put the toggle switch in the automatic position for testing, and it can be put into use after passing the test.
3. If you need to manually operate the switch, you must first toggle the mode switch to "manual" mode.



4. Automatic mode is recommended.

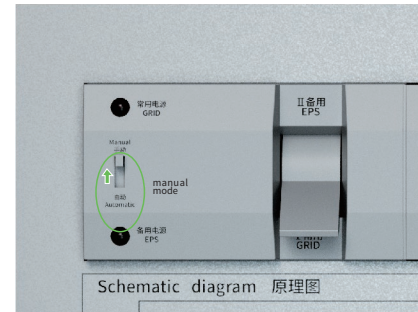

Precautions

- In order to prevent dust and dirt from causing malfunctions, please remove them in time.
- Please check whether the electrical contact parts are deformed or damaged, and remove metal particles and burn marks on and around the contact surface of the contacts.
- Rust, acidification and dust on the contact surface can cause poor contact, please manually operate the ATS several times, and measure the contact resistance when necessary.
- After removing dust and dirt, use a 500V megohmmeter to measure the insulation resistance between the common, standby, load terminals and their poles, including all live parts and the installation guide rail. The insulation resistance should not be lower than 10MΩ before use.